



# Tall Boy® 24 EUKit Instructions

## ASAP INSTALLATION TOOL

### APPLICATION INFORMATION

The OMG Tall Boy tool is designed for installing OMG Roofing Products' Fasteners in combination with approved OMG Plates, as well as OMG TreadSafe Tubes (45 - 60 mm).

### ADJUSTING DRIVE DEPTH

1. Loosen locknut ring.
2. Rotate the Tall Boy in the direction (clockwise or counter-clockwise) for desired depth setting. Clockwise lowers the depth setting, counter-clockwise raises the depth setting.
3. Once set to the proper depth, re-tighten the locknut ring against tool.

**NOTE:** Take care to accurately set the drive depth on your Tall Boy Tool for the application. Doing so will help maximize the life of the bit, and help improve installation quality with proper plate attachment.

### TO CHANGE BITS

1. Remove cone at end of tool rotating cone shaft in the horizontal groove. (See Figure 1)
2. Cone should come free and bit holder should be visible.
3. Unscrew the bit holder cap from the bit holder.
4. Remove worn bit.
5. Slide new bit into cap and re-tighten into bit holder.
6. Replace cone.



Figure 1

Superior productivity.  
Superior performance.




**ROOFING PRODUCTS**  
153 BOWLES ROAD,  
AGAWAM, MA 01001 USA  
+1 413-789-0252  
WWW.OMGROOFING.COM  
INFOEUROPE@OMGINC.COM

**EUROPE MARKET MANAGER**  
Lennard Spirig  
LSpirig@omginc.com  
Mob: +41 79 200 19 30  
Office: +41 71 599 19 30



# Tall Boy® 24 EUKit Parts List

**Tool SKU: TallBoy-24EUKit**

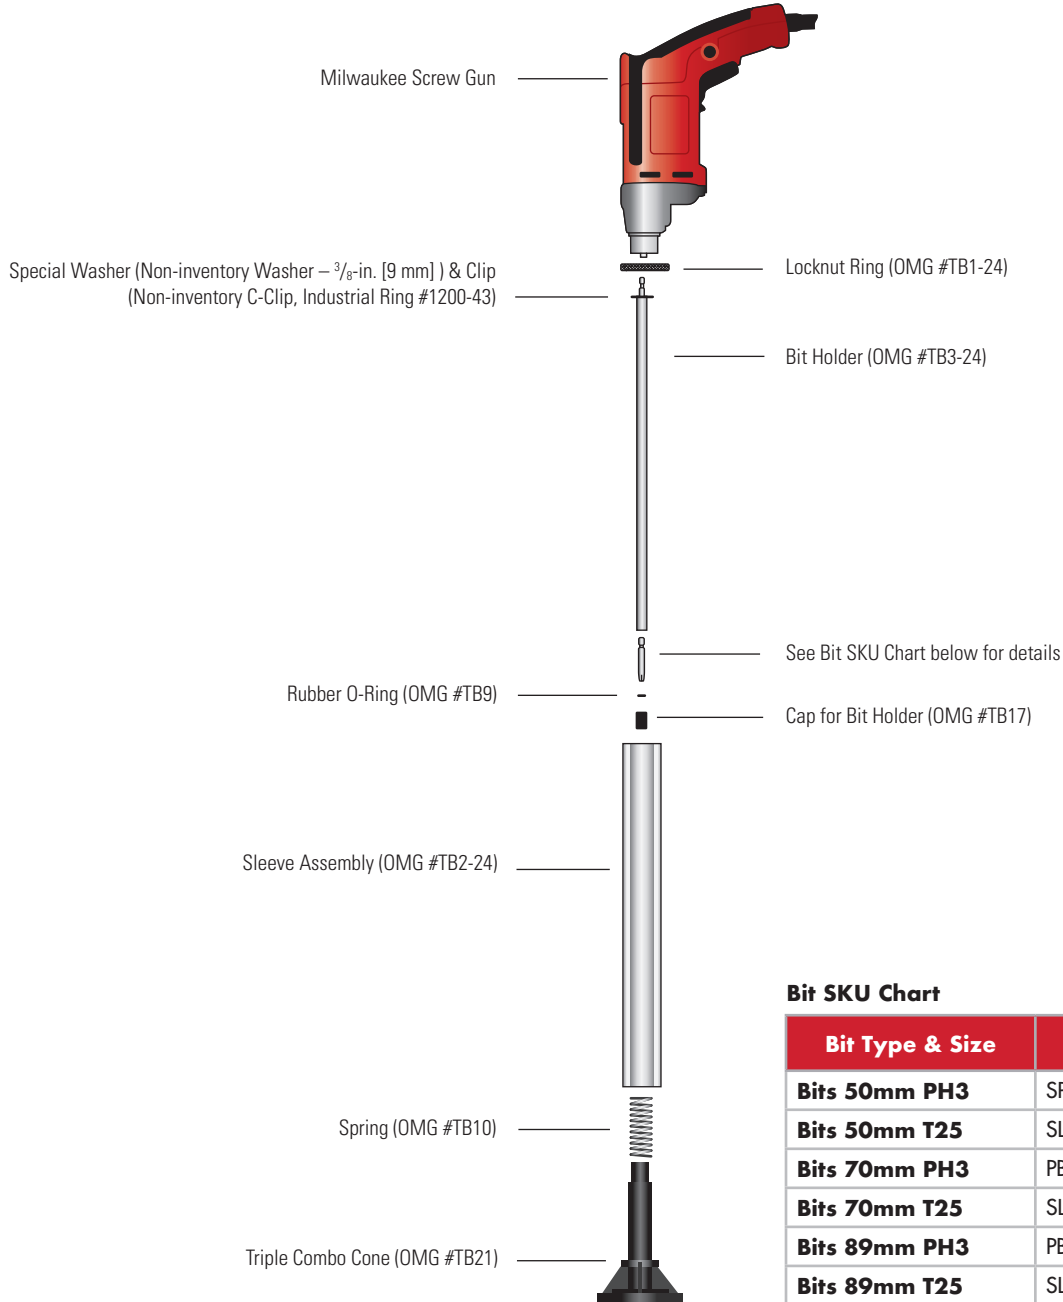

### Bit SKU Chart

Bit Type & Size	SKU
<b>Bits 50mm PH3</b>	SPD11
<b>Bits 50mm T25</b>	SL25BITX2
<b>Bits 70mm PH3</b>	PB234
<b>Bits 70mm T25</b>	SL25BITX275
<b>Bits 89mm PH3</b>	PB312
<b>Bits 89mm T25</b>	SL25BITX312



## ROOFING PRODUCTS

153 BOWLES ROAD, AGAWAM, MA 01001 USA  
413-789-0252 [OMGROOFING.COM](http://OMGROOFING.COM) [InfoEurope@OMGinc.](mailto:InfoEurope@OMGinc.)

